


E Series Touch Panel



Manual

System Diagram

L-BUS

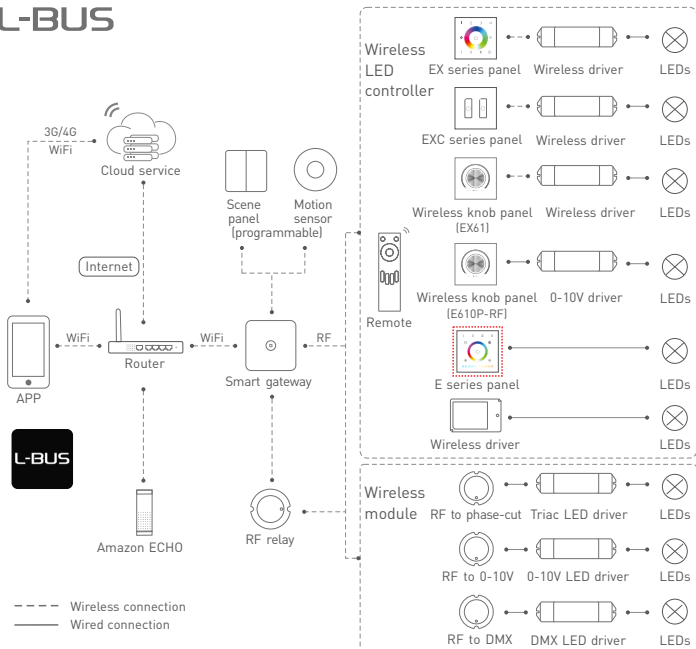

Product Features

- 2 in 1 function: RF wireless control and PWM power output.
- Power output, lamps can be connected directly, easy and convenient.
- Touch keys with chord and LED indicator.
- Adopt capacitive touch control technology on the full color circle that makes LED color selection more user-friendly.
- Touch panel can be directly controlled by a remote or a smart phone if a gateway is added.


Technical Specs

Model	E1	E2	E4 / E4S	E5S
Control Type	DIM	CT	RGBW	RGBWY
Input Voltage	12-24Vdc			
Wireless Frequency	RF 2.4GHz			
Current Load	4A×2CH Max. 8A	Max. 4A	3A×4CH Max. 12A	3A×5CH Max. 12A
Output Power	(0~48W...96W)×2CH Max. 192W	0~48...96W	(0~36W...72W)×4CH Max. 288W	(0~36W...72W)×5CH Max. 288W
Protection	Short circuit/Over current protection, auto recovery. Reverse connection protection.		Reverse connection protection.	Reverse connection protection.
Working Temp.	-20°C~55°C			
Dimensions	L86×W86×H36(mm)			
Package Size	L113×W112×H50(mm)			
Weight(G.W.)	235g	231g	221g	221g


* Products with **L-BUS** Advance Mode logo support the function of WIFI-108 advanced mode.



Installation Instructions

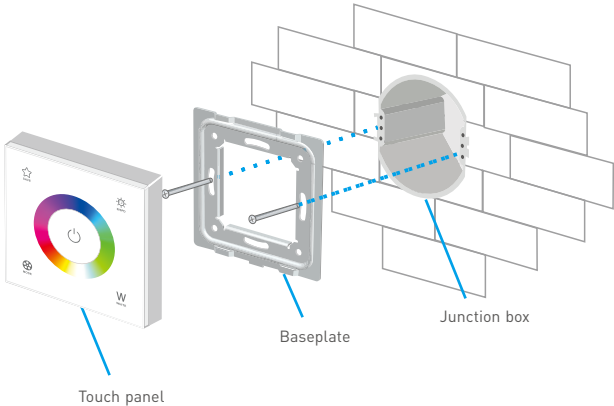

Typical junction boxes are as follows:

 

European style


 



86 type






Product Size

Unit: mm

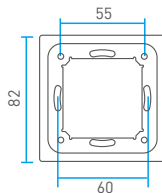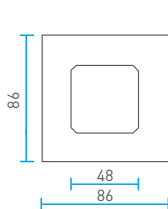

E1 / E2

 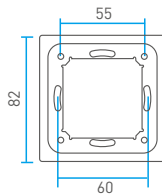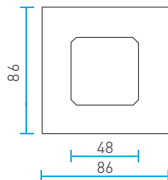


E4 / E4S / E5S

Key Functions


When blue indicator light of  key is on, long press  to turn on/off buzzer.

When white indicator light of  key is on, long press  to match code.


E series touch panel's scene-mode keys are corresponding with WiFi gateway APP's scene-mode, the scenes of panel can be changed by APP or panel.

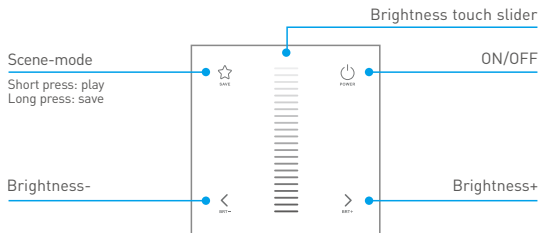

E1

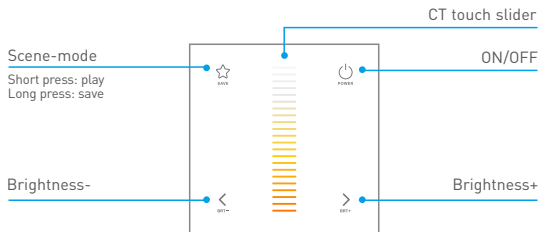

E2

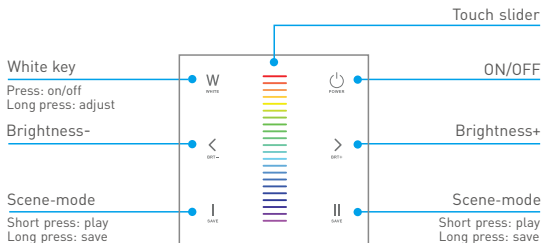

E4



E4S

E4S Modes

- Static red
- Static green
- Static blue
- Static yellow
- Static purple
- Static cyan
- Static white
- RGB jumping
- 7 color jumping
- RGB gradient
- 7 color gradient
- Static black
- Close RGB only

Scene-mode


Short press: play
Long press: save

Speed

ON/OFF

CT brightness

Press: on/off
Long press: adjust

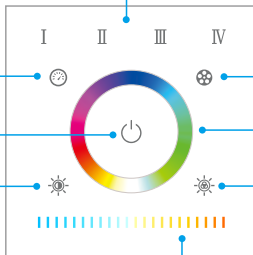

Mode

Touch color circle

RGB brightness

Press: on/off
Long press: adjust

CT touch slider


E5S

Modes

- Red green jumping • Green blue jumping • Red blue jumping • RGB jumping • 7 color jumping
- Red green gradient • Green blue gradient • Red blue gradient • RGB gradient • 7 color gradient

System Diagram

PS: No WiFi router is needed when a gateway is connected to your phone directly.

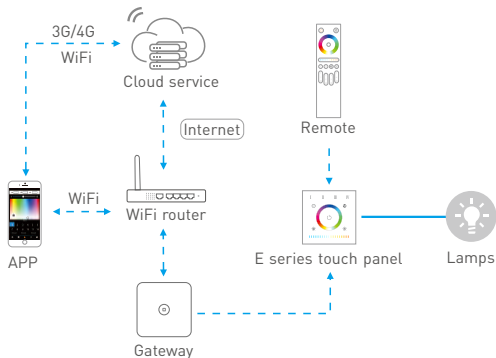

Applications

1.  + 
E series touch panel Lamps


2.  +  + 
E series touch panel Remote Lamps

3.  +  + 
E series touch panel WiFi master controller Lamps


4.  +  +  + 
E series touch panel WiFi master controller Remote Lamps

RF Wireless Wiring

Single Zone Control




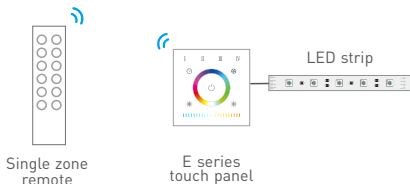


Multiple Zone Control

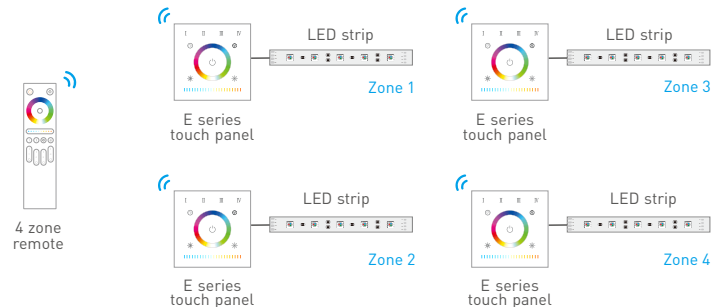

* Touch panels can be simultaneously controlled by multiple remotes. Please refer to the remote manual for further instructions.


Terminals

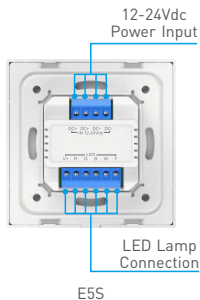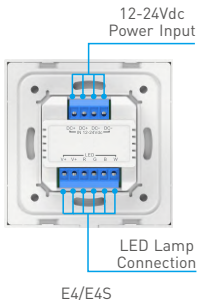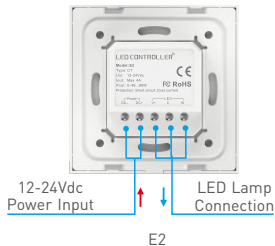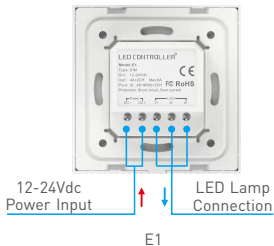

Wiring Diagram


E1: Connect with 12V strip. Max 48W/CH

Connect with 24V strip. Max 96W/CH

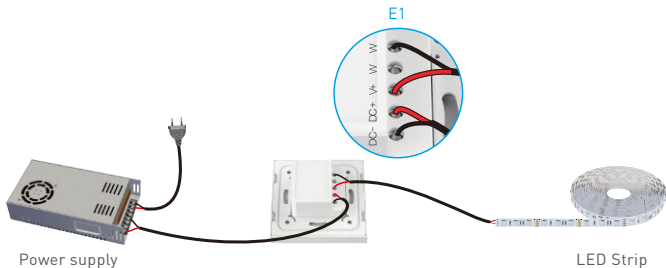


E2: Connect with 12V strip. Max 48W for two routes.



Connect with 24V strip. Max 96W for two routes.

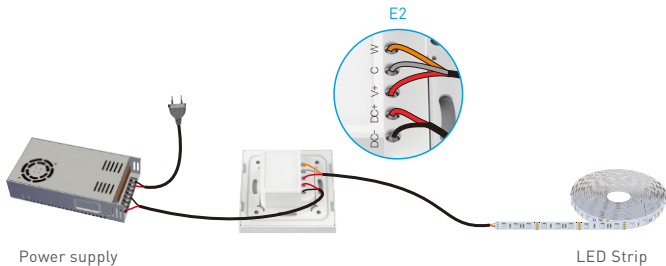

E4/E4S: Connect with 12V strip. Max 36W/CH
Connect with 24V strip. Max 72W/CH

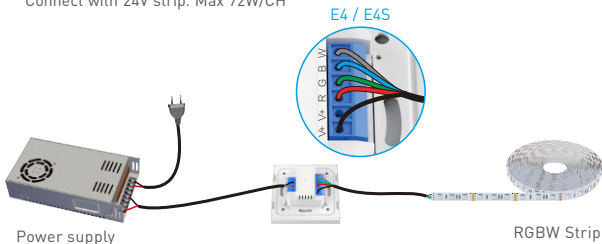

E5S: Connect with 12V strip, RGB Max. 108W, CT Max. 36W
Connect with 24V strip, RGB Max. 216W, CT Max. 72W

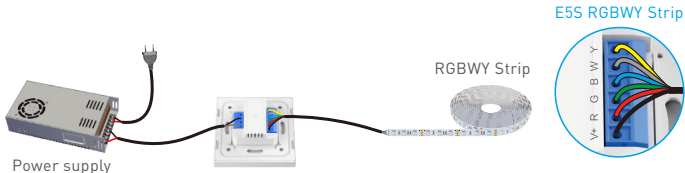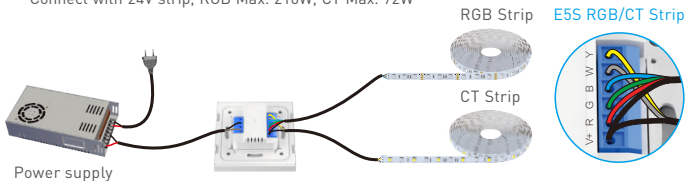

Match Code between Touch Panel & Remote

Please match/clear code when panel indicator light of On/Off is white.

1. Long press  on touch panel until indicator lights flash.



E1



E2



E4



E4S



E5S

2. Match code with F series remote:

Single zone remote: long press ON/OFF key on remote, the indicator light of the touch panel stops flashing, match code successfully.

Multi-zone remote: long press the matching zone's ON & OFF keys on remote simultaneously, the indicator light of the touch panel stops flashing, match code successfully.



F1
(DIM)



F2
(CT)



F3
(RGB)



F4
(RGBW)



F5
(DIM)



F6
(CT)



F7
(RGB)



F8
(RGBW)

E1 touch panel matches with F1/F5 remote, E2 matches with F2/F6, E4/E4S matches with F4/F8.

Match code with Q series remote: long press the matching zone's "ON" key on remote, the indicator lights of touch panel stop flashing, match successfully.



Q1



Q2



Q4



Q5

E5S touch panel matches with Q5 remote.

Match Code between Touch Panel & Gateway

Please match/clear code when panel indicator light of On/Off is white.

1. Long press  on touch panel until indicator lights flash.



E1



E2



E4



E4S



E5S

 
2. Turn on APP, enter “zone set” interface, click the right top “MATCH” key, then implement the following prompts.



Clear Code

Please match/clear code when panel indicator light of On/Off is white.

Press the bottom two keys on touch panel simultaneously for 6 seconds, the indicator light flashes several times, clear code successfully.



* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
- Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- Beyond warranty periods.
 - Any artificial damage caused by high voltage, overload, or improper operations.
 - Products with severe physical damage.
 - Damage caused by natural disasters and force majeure.
 - Warranty labels and barcodes have been damaged.
 - No any contract signed by our company.
1. Repair or replacement provided is the only remedy for customers. Our company is not liable for any incidental or consequential damage unless it is within the law.
 2. Our company has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.